

USER GUIDE FOR 4G GPS BLUETOOTH BUTTON





Content

Box Contents	4
Getting started	4
Getting to know your alarm device	5
Charging station	8
Preparing the charging station	9
Recharging your alarm device	10
Making an alarm call	12
How to turn the alarm device on	13
How to turn the alarm device off	14
How to turn off the charging station	15
How to check that the alarm device is on	16
What does the green light mean	16
What does the blue light mean	16
What does the red light mean	17
Specifications for the alarm device	17
Warnings	18

Content box

- Mobile Alarm device
- Charging station with a USB cable in the base
- · USB power supply
- Spare charging cord which magnetic connection for use when away from home
- Lanyard
- Keychain

For the first usage

- Charge the alarm device for at least 4 hours in the charging station before turning on.
- · Read these instructions carefully.
- Ensure your contact persons are aware that you have the alarm device

Getting to know your alarm device

Front side



Side

TOP BUTTON

BOTTOM BUTTON

MOBILE NETWORK SIGNAL INDICATION (GREEN LED)

INDICATION OF GPS ACTVITY (BLUE LED)

BATTERY LEVEL INDICATION (RED LED)
THIS WILL FLASH QUICKLY WHEN THE BATTERY IS LOW

REAR SIDE



Charging station

Front side



SOS BUTTON
(IF THE ALARM DEVICE IS WITHIN VIEWING
DISTANCE IT WILL ALLOW YOU TO CREATE AN ALARM)

Preparing the charging station

- At the bottom of the charging station is the charging cable. Unwind the whole cable.
- Connect the charging cable to the supplied power adapter.
- · Plug the adapter into the wall socket.
- · When connected the blue LED light ring will glow.
- The charging station is now ready for use.



Recharging your alarm device

- · Place the alarm device upright in the charging station.
- The alarm device will vibrate once and the light on the side will blink with a slow red.
- · The alarm device is now charging.
- If you press the SOS button briefly (1 second), the alarm device will show its status again. If after this the red light is continuously lit, the alarm device is fully charged.



You can also charge the alarm device with the supplied loose cable. Connect the cable to the magnetic contact points on the back of the alarm device and plug the cable into the USB adapter. Then plug the adapter into the wall socket.



After the alarm device is charged, you can take it from the charging station and wear it around your neck or use as a key fob.

If you would prefer to wear the alarm device on your waistband, then there is also a belt clip available. Please contact customer service for more information.

The alarm device works both Inside and Outside your house.

The alarm device is capable of two-way speech allowing you to communicate what is going on and listen to the responder in the event of an alarm.

The alarm device battery lasts between 3 and 5 days. However, we recommend that the alarm device is charged daily to ensure the alarm device achieves maximum performance. If your battery is almost empty, the red light on the side of the alarm device will blink quickly.

Making an Alarm call

- To make an alarm call press the SOS button on the front of the alarm device for 3 seconds until you hear 3 loud beeps.
- The alarm device will vibrate every 5 seconds until the alarm is passed to a responder.
- After a short period, a two-way speech connection with the care centre or with one of your contacts will be created (depending on your chosen subscription type).
- After the conversation with the care centre or your contact person the conversation will end automatically.
 You will not need to press any buttons.

Attention! If it is busy at the care centre, it may take a little longer before connecting.

If no voice call has been established, then your alarm device will automatically try again. The alarm device will continue to vibrate every 5 seconds until the call has been established. We recommend that you periodically make a test call, so you know how the alarm device works.

How to turn the device on

Place the alarm device in the charging station or press the **SOS button for 1 second**

The device will vibrate, and all the lights will turn on for 1 second. If the device was already on, nothing will happen .



How to turn the alarm device off

We recommend that you never turn off the alarm device off.

If it is required, you can turn the alarm device off by following the steps below:

- Press and hold the top button on the side of the alarm device and the SOS button at the same time for 2 seconds.
- The device will vibrate, and the blue and green lights will show for 1 second.




How to turn the charging station off

In normal circumstances we recommend that you never turn off the charging station.

If it is required, you can turn the charging station off by following the steps below:

- Unplug the charging station from the mains and press and hold the left button simultaneously with the SOS button for 5 seconds.
- The LED ring around the charging station go first red then green before turning off.

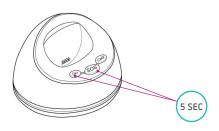

How to check that the alarm device is on

To check whether the alarm device is on, briefly press (1 second) the SOS button. All three LED lights on the side of the alarm device will turn on. After 5 minutes the LEDs on the side will stop flashing.

What do the lights mean

Green light (upper led)

- If the light blinks every 3 seconds: this means that the device a stable connection to the mobile network.
- If the light slowly flashes, the device is searching for a better mobile network.

Blue light (middle led))

- If the light blinks every 3 seconds: the alarm device is searching for a GPS position.
- If the light blinks twice every 3 seconds:
 the alarm device has a location established.

Red light (bottom led)





- If the light lights up constantly: the alarm device is completely charged.
- If the light blinks quickly: the battery is low/empty and should be charged.
- If the light blinks twice every 3 seconds: the alarm device has a Bluetooth connection to the charging station.

Specifications for the alarm device:

• Dimensions: 61mm x 44mm x 16mm

Weight: 40 g

· Battery : rechargeable , 3.7V, 850mAh

Charging voltage: 5V DCWater resistance: IP67

Location finding techniques: GPS, BLE, WIFI, LBS

Warnings:

- Do not put the alarm device in very dusty, cold or hot places.
- Clean the alarm device with a soft, clean cloth. Do not use cleaning chemicals.
- Do not open the alarm device case in any circumstance.

TEDALERT

TED Alert UK, 59 High Street, Maidstone, Kent, ME14 1SR

Email: info@tedalertuk.co.uk

Tel: 0333 7898 999 **Web:** tedalertuk.co.uk